Care Kit Instructions Prism[™] Solid Surface

Renewing the Finish

Use a 5" or 6" random-orbital sander to improve sanding efficiency and uniformity.

Sanding Steps:

- 1. Move the sander in an orbital direction.
- 2. Overlap each pass by 50%
- 3. Sand slowly and evenly.
- 4. Keep micron paper clean from sanding dust.

Prism[™] Class A & A1 Colors - Matte Finish:

• Use a 100 micron sanding pad to remove marks and scratches and even out the finish. The easily maintained matte finish is suitable for high use areas.

Prism[™] Class B Colors - Satin Finish:

- Remove marks and scratches with a 100 micron sanding pad.
- Repeat the process with a 60 micron sanding pad.
- Use a Scotch-Brite® pad (#7447 Maroon, Very Fine, 320-400 Grit) under the sanding pad to even out the finish.
- Repeat the process with a Scotch-Brite® pad (#7448 Gray, Ultra Fine, 600-800 Grit).

Prism[™] Acrylic Class C Colors - Satin Finish:

• Use a 320 grit sanding pad to remove marks and scratches and even out the finish.

Quality Assurance

With proper care, your Prism[™] Solid Surface can stay looking like new. Your Inpro[®] Prism[™] Solid Surface carries a 10-year Limited Warranty.

For more information:

Visit our website at www.inprocorp.com or contact your Inpro® Prism™ sales representative at 800-222-5556.

IPC.1242 REV.7

Inpro

