WebbLok™ End Tip Replacement

Step 1: Remove and save the top screw and spacer from each track.

Step 2: Slide the shade bottom rail and end tips out of the top of the tracks.

Step 3: Unscrew each end tip from the bottom rail assembly.

Step 4: Screw the new end tips onto the bottom rail assembly.

Step 5: Adjust the end tips to center the shade in the opening. To adjust the end tips, first squeeze and center the finger clips in the opening. Keep this position while adjusting each end tip in or out. The proper end tip position is when the square end just overlaps the begining of the aluminum track (see illustration).



- Step 6: Reinsert the bottom rail assembly and endtips into the tracks and test operation of the shade to make sure further adjustments are not needed.
- Step 7: Replace all mounting hardware, making sure to reinstall top screw spacer.

