

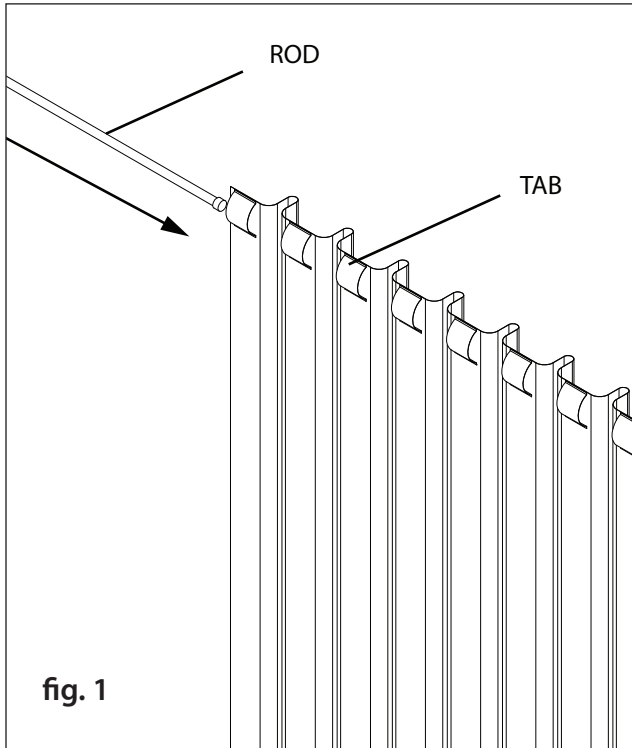


Back Tab Drapery

Installation Instructions

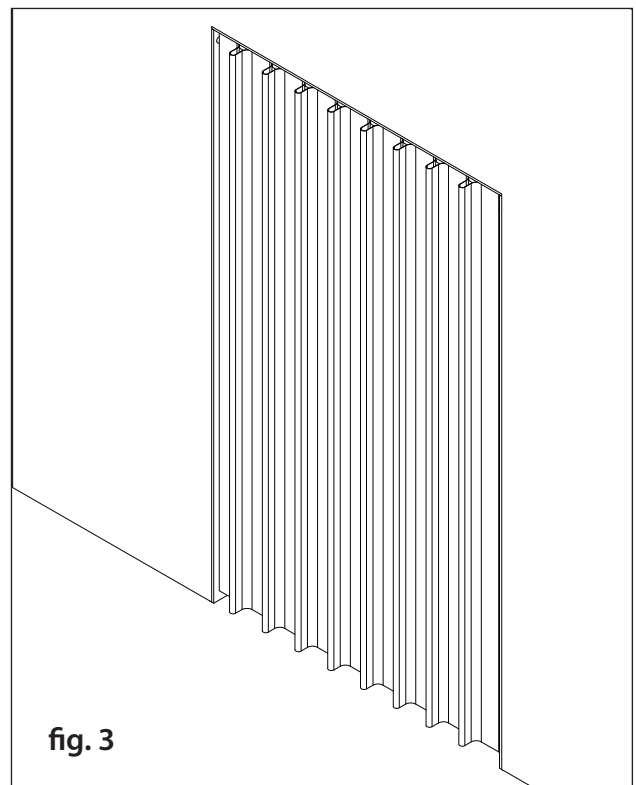

1. Insert rod through tabs on drapery. (figure 1 & 2)
2. Attach curtain rod to brackets or insert spring tension rod into opening.
3. Straighten curtain for a pleated appearance. (see figure 3)

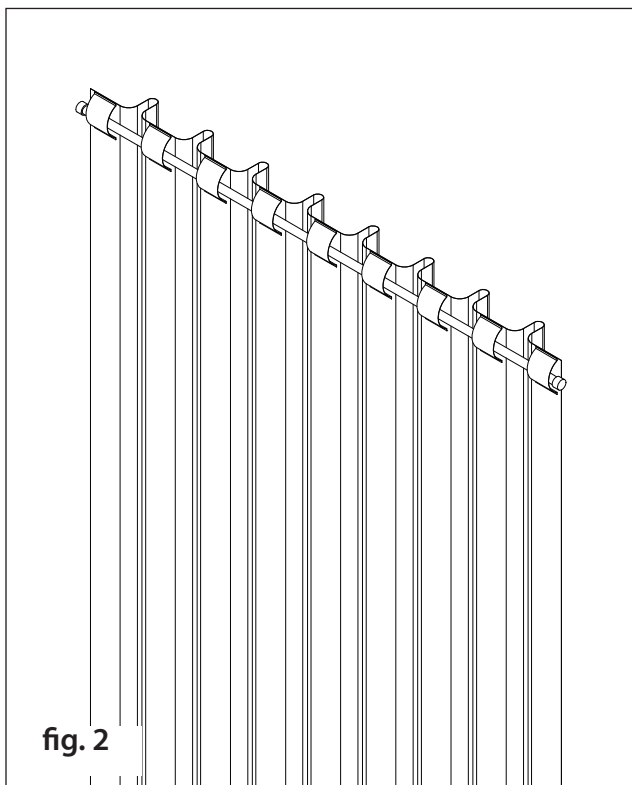

IPC.1943/REV1

JUNIPER™ Commercial Window Treatments

inpro.com • 800.222.5556 • 262.679.9010

World Headquarters S80 W18766 Apollo Drive, Muskego, WI 53150 USA

Installation Hotline: 866.394.6776

inpro®