


# Installation Instructions

## Beaded Drop Chains with Connectors

---

FIG. 1

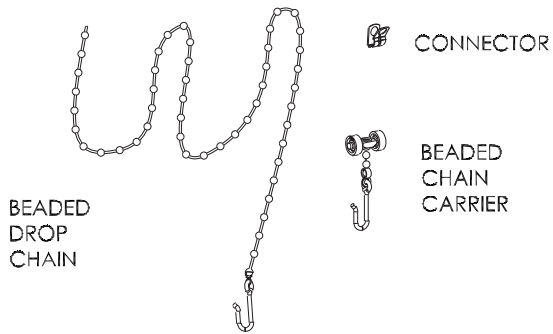

1. Lay beaded drop chains with hooks, connectors, and carriers on a work surface. (see figure 1)
2. Insert 6" of the beaded chain (the end opposite the hook) into the front of the slotted hole of the connector. (see figure 2)
3. Pull the beaded chain into the slot. Assemble one beaded drop chain for each grommet on the curtain. (see figure 3)

FIG. 2

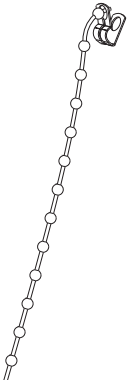


FIG. 3



IPC.523/REV.1

CLICKEZE® Privacy Systems

inpro.com • 800.222.5556 • 262.679.9010

World Headquarters S80 W18766 Apollo Drive, Muskego, WI 53150 USA

Installation Hotline: 866.394.6776

**inpro**®

# Installation Instructions

## Beaded Drop Chains with Connectors

---

FIG. 4



### Connecting beaded drop chains

4. Once the connectors are properly positioned on the beaded drop chains, take the last bead of a drop chain and insert the bead into the slotted hole of the connector on the next beaded drop chain.(see figure 4)
5. Pull the beaded chain through the slot so the last bead is inside the connector. Do this with all beaded drop chains.
6. Attach beaded chain carrier to the connector by inserting the hook through both holes of the connector. Pull and compress the connector until it is at the bottom of the hook. (see figure 5a and 5b)
7. Do this with all carriers and beaded drop chains. Avoid tangling the beaded drop chain assembly. (see figure 6)
8. Insert the carriers into the track.
9. Attach curtains to the hooks of the beaded drop chain.

FIG. 5A



FIG. 5B



FIG. 6

