

Prism™ Solid Surface

Installation Instructions Large & Small Soap Dish

Please read all instructions before installing products.

1. Make sure all surfaces are clean and free of dust, dirt, grease, and soap scum.

2. Install the soap dish in the corner of the shower or tub surround. Determine the height of the soap dish and mark the location on the wall.

3. Apply two quarter size drops of silicone adhesive to each back surface of the soap dish. *See Figure 1.*

4. Apply a quarter size drop of hot melt glue to each back surface of the soap dish. *See Figure 1.*

5. Immediately press the soap dish into the corner and hold until the hot melt sets-up.

6. Apply a bead of silicone around the perimeter where the soap dish meets the walls. Remove any excess adhesive with denatured alcohol.

Note:

If you are using pick resistant color coordinated caulk (FastFill) please refer to the FastFill Installation Addendum.

7. Allow the silicone to completely cure before use.

FIG.1


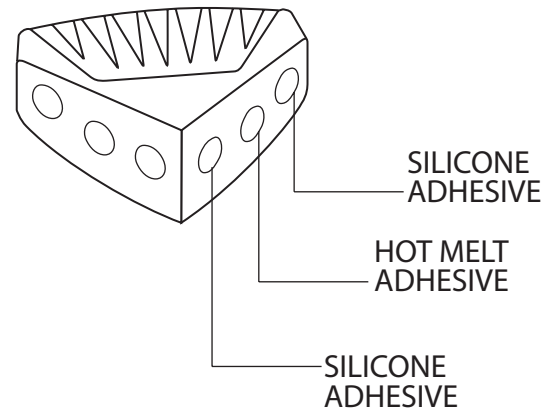


FIG.2

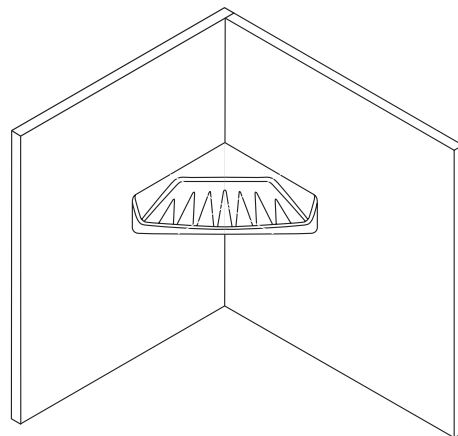

IPC.1316/REV.5

ENDURANT® Washroom Systems

inpro.com • 800.222.5556 • 262.679.9010

World Headquarters S80 W18766 Apollo Drive, Muskego, WI 53150 USA

Installation Hotline: 866.394.6776

inpro®